



# 1960 Corvette Headlight Switch

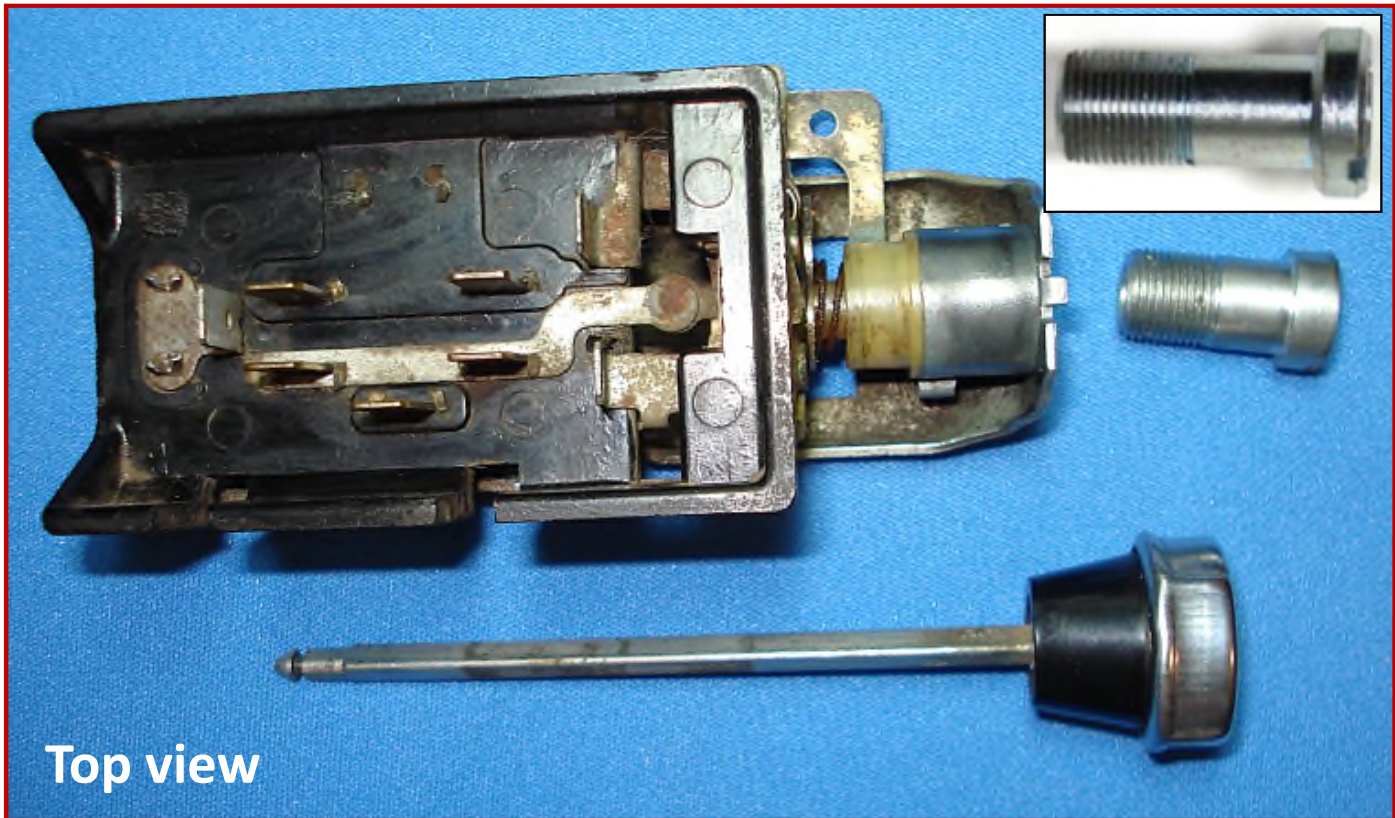

Top view

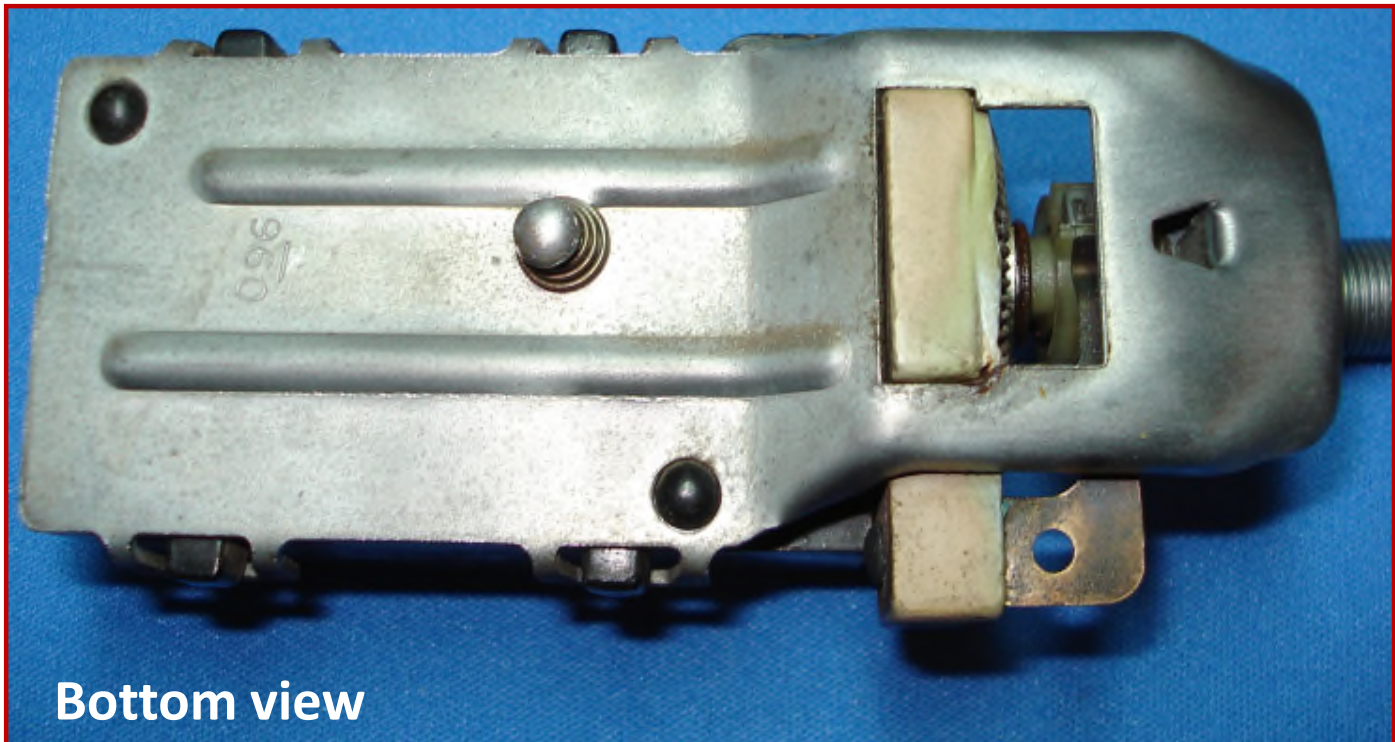


Bottom view



To remove the switch you must first remove the “stem” by pushing up on the spring-loaded button on the bottom while pulling out the knob and stem. Start by pulling the knob all the way out to the second “stop” and then push the button to let the stem come out as you continue pulling. Then, you can remove the switch retaining nut (top right).

Dave Zuberer



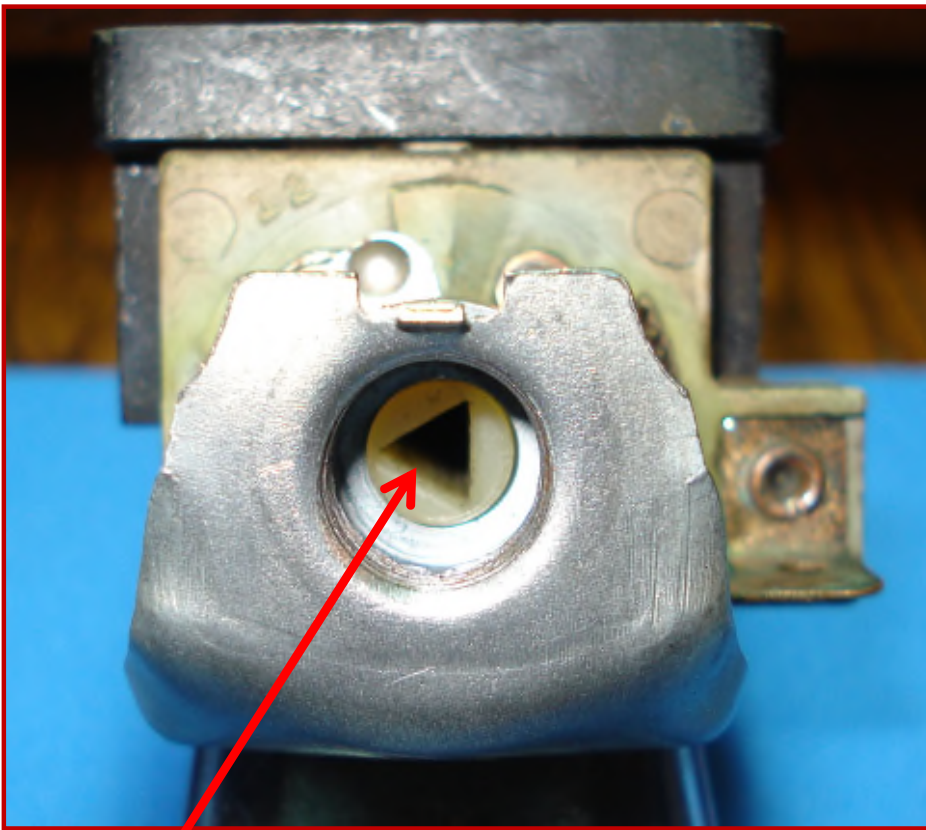

Turning the headlight switch knob rotates the contact (C) along the resistor wire supplying more or less current to dim or brighten the dash lights or to click the courtesy lights on. Turning the knob clockwise dims the lights; CC brightens them and at full CC the courtesy light turns on with a slight "click".

